




BLANK POOL GATE INSTALLATION INSTRUCTIONS

READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION:

It is the responsibility of the installer to meet all code and safety requirements, and to obtain all required building permits. The railing installer should determine and implement appropriate installation techniques for each installation situation. VISTA Railing Systems Inc, its distributors and dealers shall not be held liable for improper or unsafe installations. VISTA Railing Systems posts must always be secured to the sub structure and should never be attached to only the surface material (ie deck board). Failure to follow all of these instructions could result in serious injury or death.

Installation Instructions

1. Welded panel section can be trimmed to fit a 42" or less opening to allow a $\frac{3}{4}$ " spacing on each side of finished gate.
2. Trim excess panel off the welded panel section of gate with miter saw.
3. Slide and secure blank gate post onto the welded panel using VISTA Fastener Package (sold separately - PB7490).
4. Secure self closing hinges (sold separately - V5904) onto gate frame first, then attach to exterior post or wall using VISTA Fastener Package (sold separately - PB7490).
5. Attach lockable gate latch (sold separately - V5903) using VISTA Fastener Package (sold separately - PB7490) to blank gate post and exterior post or wall.

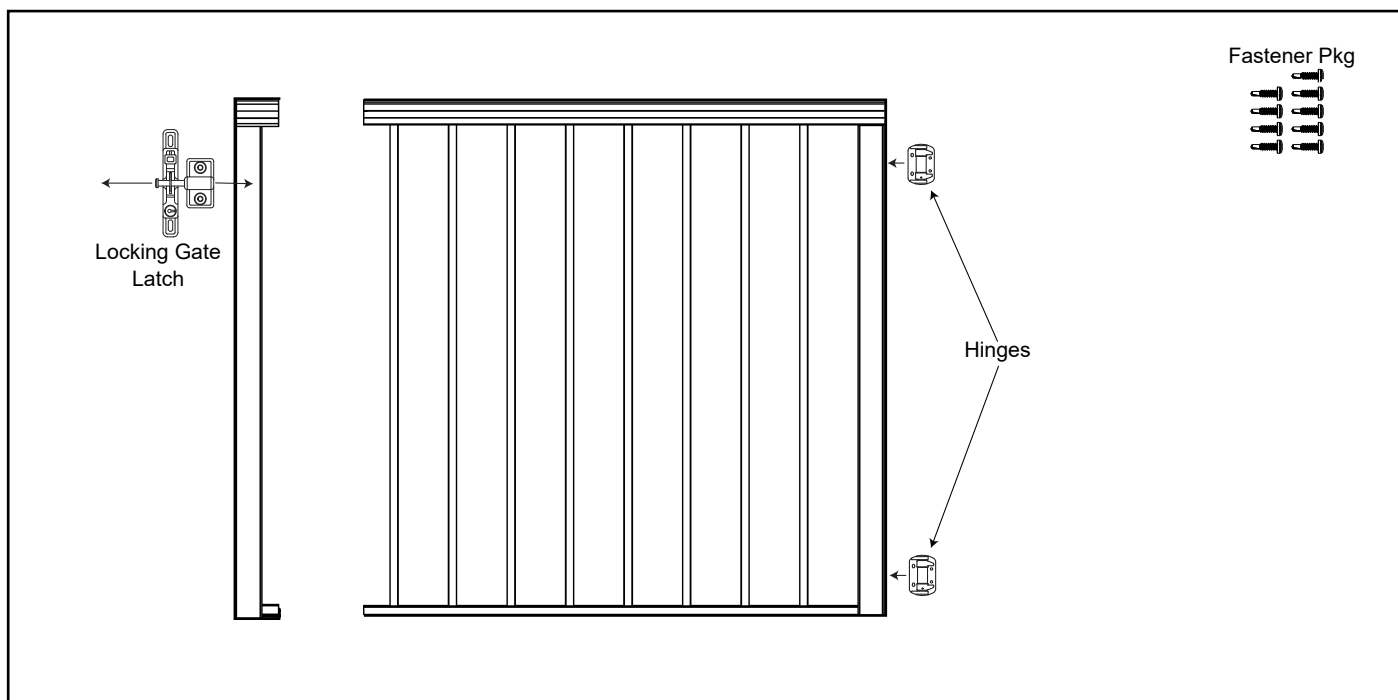

Tools & Materials Required:

Handsaw 10" Miter Saw with thin (Kerf) Blade
Electric Drill - 1/8" and 3/16"
Drill Bits 3/8" Hex Head Driver
Torx Screwdriver - T25 drive
Robertson Screwdriver - #2
Measuring Tape

Vista Railing Systems

Toll Free: 800-667-8247 or www.vistarailings.com
Vista™ is a registered trademark of Vista Railing Systems Inc.
Created July 2023 V1