





HANDRAIL INSTALLATION INSTRUCTIONS

READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION:

It is the responsibility of the installer to meet all code and safety requirements, and to obtain all required building permits. The railing installer should determine and implement appropriate installation techniques for each installation situation. VISTA Railing Systems Inc, its distributors and dealers shall not be held liable for improper or unsafe installations. VISTA Railing Systems posts must always be secured to the sub structure and should never be attached to only the surface material (ie deck board). Failure to follow all of these instructions could result in serious injury or death.

Handrail Package Includes (PB7482)

- Qty 1 - 8' round handrail
- Qty 1 - 6" splice
- Qty 1 - Fastener package (PB7492)
- Qty 2 - Cap rail plugs (V5160)
- Qty 3 - Handrail brackets (V5407)

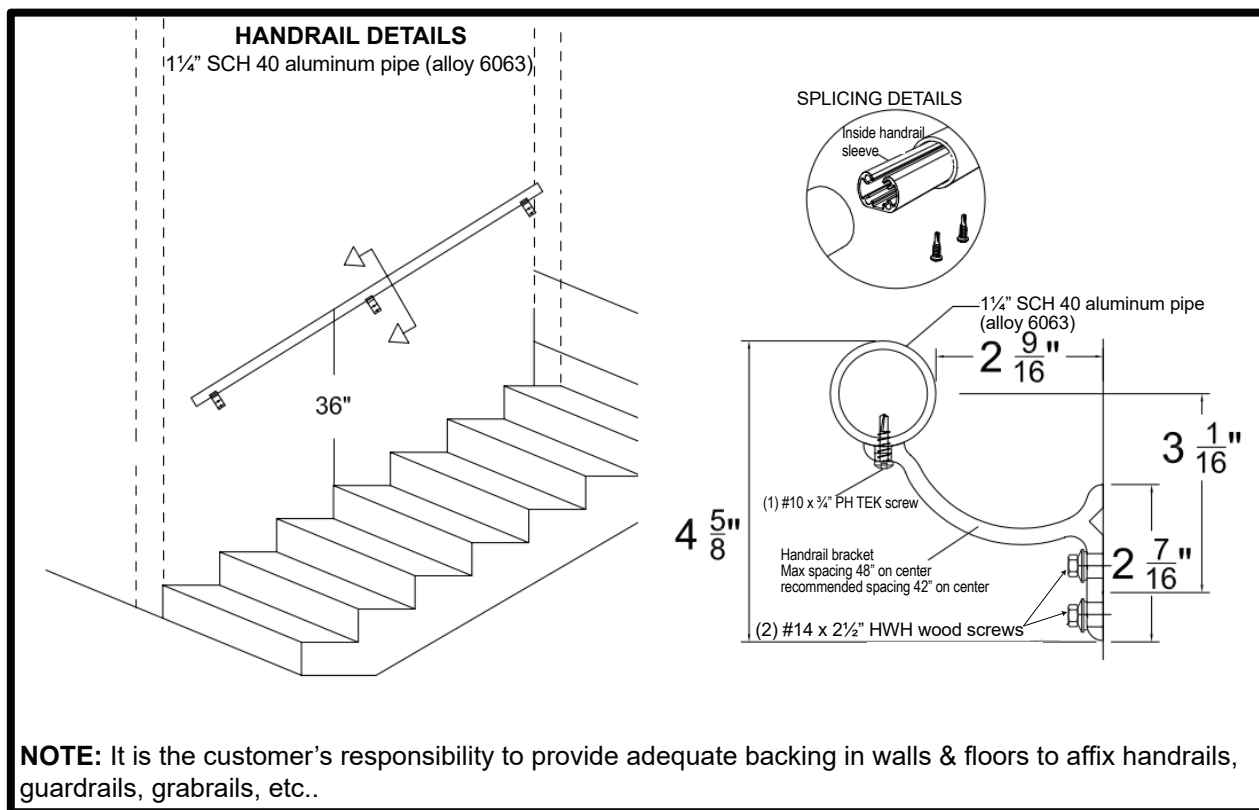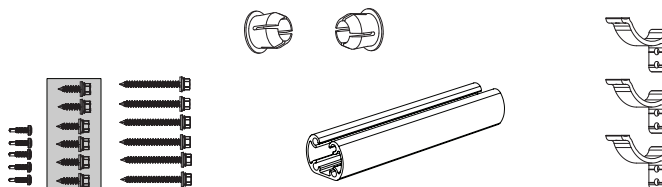

Installation Instructions

1. Measure and mark wall as handrail should be 36" from top of stair.
2. Install brackets using 2 1/2" HWH wood screws (included in fastener package) and 3/16" drill bit.
3. Space brackets 42" apart.
4. Mark the location for the pilot hole drill and fasten with #10 x 3/4" PH TEK screw
5. If you require longer than 8 ft, use 2 packages and join together using the 6" splice. Fasten with #10 x 3/4" PH TEK screw on each side of splice joint.

Note: If attaching the handrail package to a VISTA post - use the #14 x 1" fasteners included (enlarged to show detail).



Vista Railing Systems

Toll Free: 800-667-8247 or www.vistarailings.com

Vista™ is a registered trademark of Vista Railing Systems Inc.

Revised July 2023 V3