




# DOUBLE GATE INSTALLATION INSTRUCTIONS

## READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION:

It is the responsibility of the installer to meet all code and safety requirements, and to obtain all required building permits. The railing installer should determine and implement appropriate installation techniques for each installation situation. VISTA Railing Systems Inc, its distributors and dealers shall not be held liable for improper or unsafe installations. VISTA Railing Systems posts must always be secured to the sub structure and should never be attached to only the surface material (ie deck board). Failure to follow all of these instructions could result in serious injury or death.

### Installation Instructions

1. Welded panel sections can be trimmed to fit a 96" or less opening.
2. Trim equal amounts from each welded panel with a miter saw.
3. Slide latch post side on first. Secure latch post side to welded panel with the provided #10 TEK fasteners.
4. Slide blank gate post (sold separately - PB7580 - 42" or PB6580- 36") onto the other welded panel and secure with provided #10 TEK fasteners.
5. Secure hinge sides to exterior posts or walls using the provided fasteners.
6. Attach cane bolt (sold separately - V5917) to blank gate post side. Drill a hole into the deck or flooring to accommodate the drop bolt, allowing 2nd gate to lock in position.
7. Attach gate catch using #10 TEK fastener to blank gate post to secure other gate into lock position.

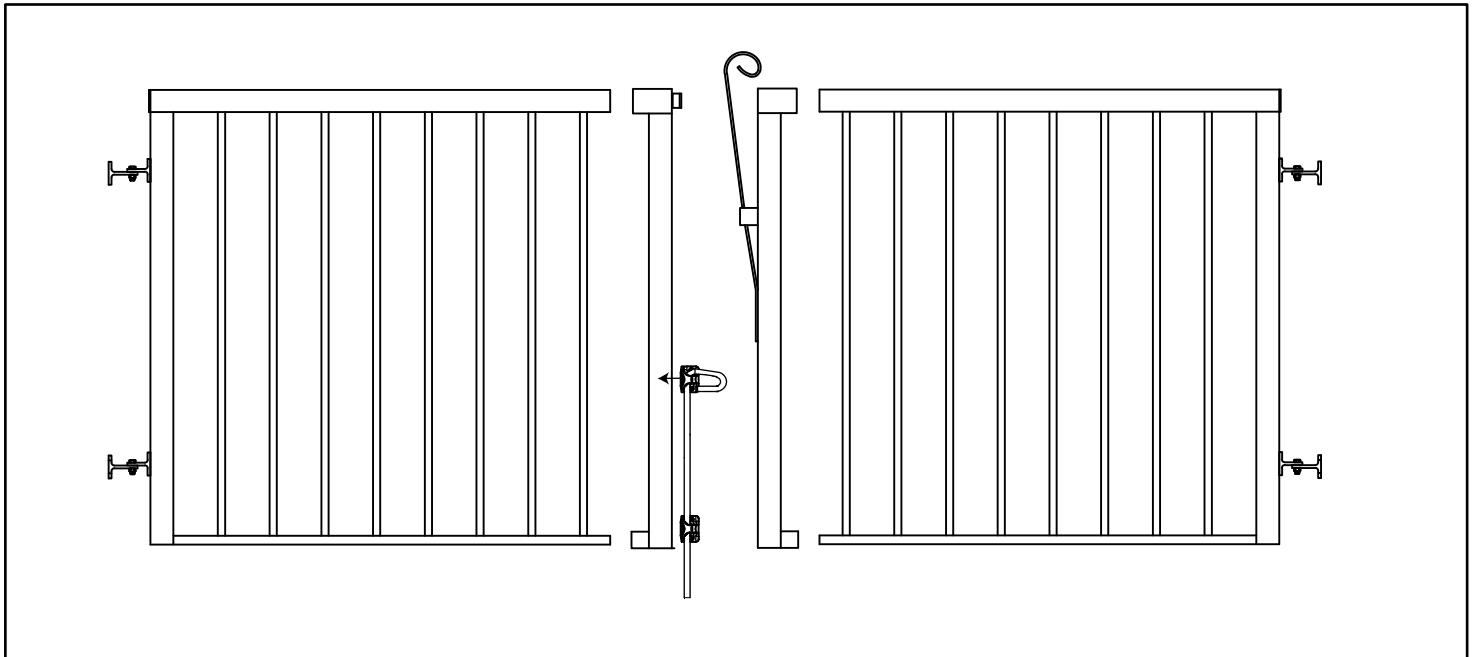

### Tools & Materials Required:

- Handsaw 10" Miter Saw with thin (Kerf) Blade
- Electric Drill - 1/8" and 3/16"
- Drill Bits 3/8" Hex Head Driver
- Torx Screwdriver - T25 drive
- Robertson Screwdriver - #2
- Measuring Tape

### Vista Railing Systems

Toll Free: 800-667-8247 or [www.vistarailings.com](http://www.vistarailings.com)  
Vista™ is a registered trademark of Vista Railing Systems Inc.  
Created July 2023 V1