




Privacy Wall Assembly Instructions

"IMPORTANT: Always check with your local building inspector and applicable building codes before installation. Guardrails must be fastened to structure (not deck surface) with appropriate fasteners for your structure. Connector rods must be installed to use as guardrail"

SLIDE 1/4" RUBBER STOPPERS INTO GASKETING BETWEEN SLATS

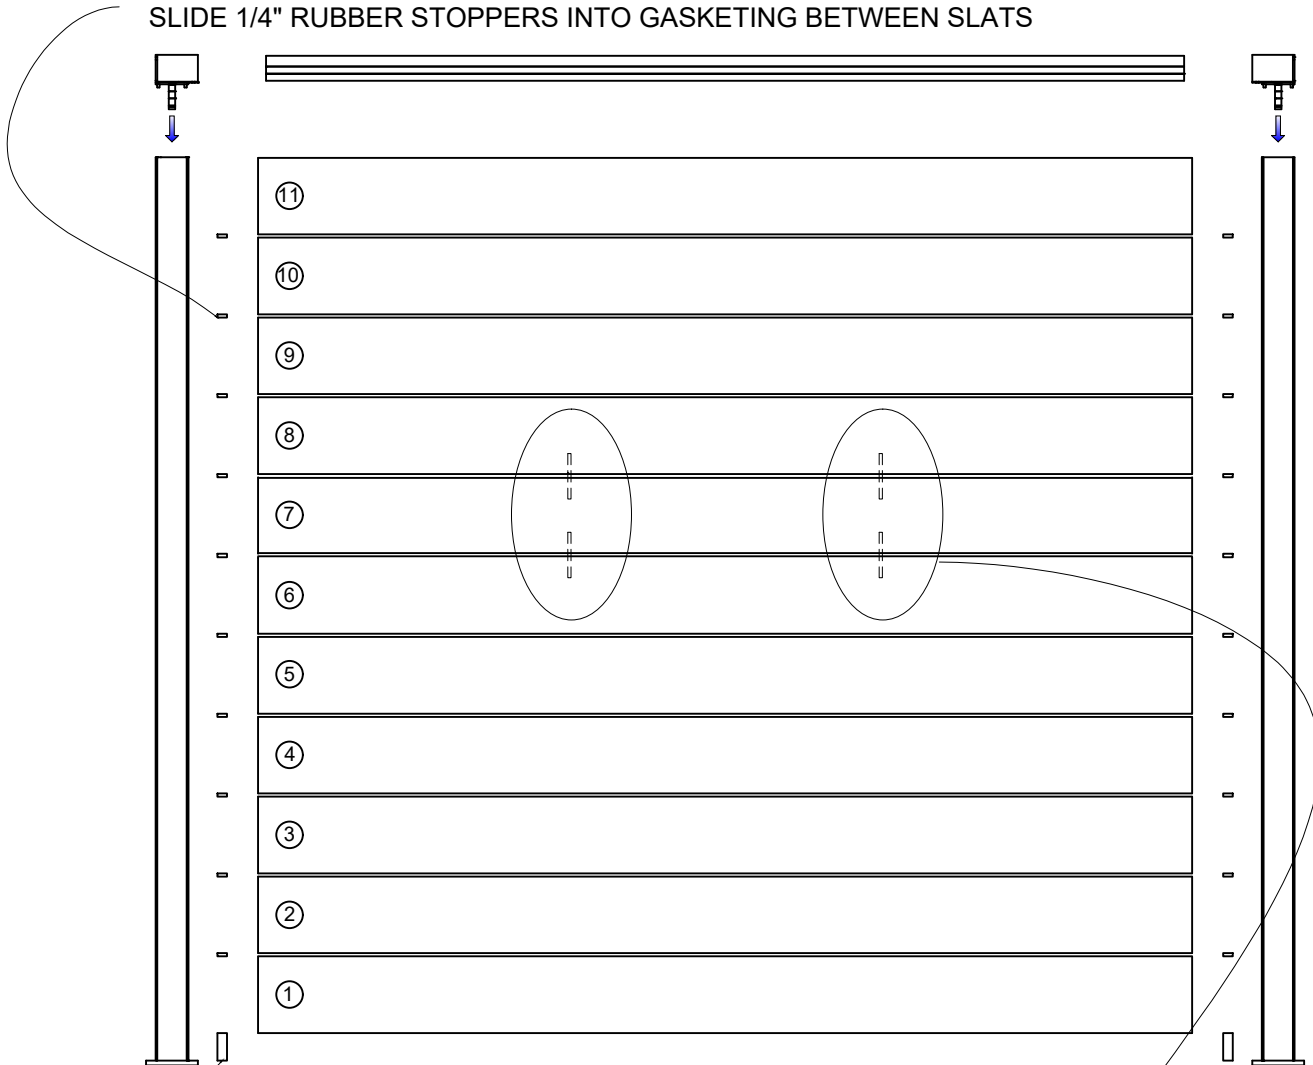

SLIDE 2 1/8" RUBBER SETTING BLOCKS INTO GASKET AT BOTTOM BEFORE FIRST SLAT

